

How to access SIM/MMC slots

To access the SIM card and Memory Card slots on the ALCATEL ONETOUCH FIERCE XL with Windows 10, simply lift up the back cover from the small opening on the lower left corner of the device.



Legend:
1 memory card slot
2 unremovable battery
3 SIM card slot

How to activate your Fierce XL with Windows 10

Simply insert your T-Mobile SIM card into the SIM card slot, and a Memory Card into the memory card slot and your device is now ready to go.

Press and hold the Power button located in the upper right hand corner on the right side of the device to power it on.

Tap to view your Start tiles.


How to set-up Cortana

- 1) Click Settings from your Start tiles
- 2) Swipe right to Apps and tap Cortana.
- 3) Tap the toggle On.

How to access Cortana

You can access Cortana in three ways:

- 1) Tap on at the bottom of the display.
- 2) Tap the tile at the Start screen.
- 3) Press and hold and automatically speak your request.

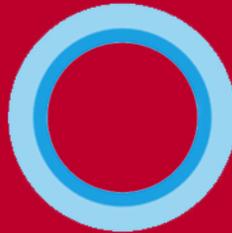


What you can ask Cortana to do

Cortana can do a wide variety of tasks for you, including, but not limited to:

- 1) Setting time-based, person-based, or location-based reminders and alarms. (You can also change appointments as needed).
- 2) Recording Notes.
- 3) Finding and navigating to places.
- 4) Searching for information.
- 5) Calling and texting contacts.
- 6) Playing music.

Accessing Settings

While on your Start screen, drag down from the top of your screen to show a Quick Settings menu with WiFi, Bluetooth, Rotation Lock and All Settings. To customize controls and features, tap on **All settings**.

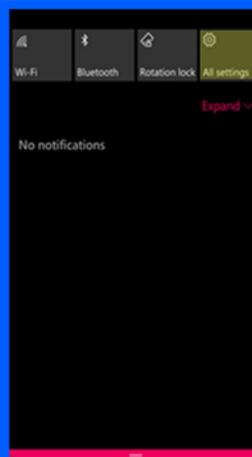

Moving Settings as Start tiles


From your Start tiles, swipe to the right to see a full list of Apps arranged alphabetically.

Tap and hold the application you want to move to your Start tiles and click Pin to Start.

Powering off the Device

Press and hold the Power button and then slide the screen down to power off the device.

Enabling Internet

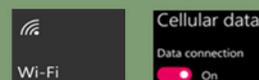

Tap on **WiFi** via the Quick Settings menu to enable/disable WiFi. Select a WiFi Network under All settings.

To enable Cellular Data, tap on All Settings, select Cellular & SIM, and toggle the switch to turn it on.

Accessing the Internet

Microsoft Edge is Microsoft's all-new Internet browser.

Click on the Microsoft Edge logo from the Start menu to start browsing.



How to customize Start tiles

Tap to view your Start tiles.

Tap and hold the application you want to unpin from the Start menu and tap .

To change the sizing on the tiles, tap and keep tapping until you find your preferred size for the application.

You can resize your tiles into any of the three sizes below:



How to access the Camera and Camera settings

Click on the icon to open the Camera application.

Click to open the Gallery

Click to enable/disable flash

Click to edit focus

Click to edit the shutter speed

Click to switch to and from cameras

Click WB to select white balance

Click ISO to change the ISO

Click to adjust brightness

Opening Mobile Hotspot

From the Quick Settings menu, select All Settings.

Select Network and wireless

Tap Mobile hotspot.

Toggle the switch on

Other devices can now connect to the internet via WiFi using your Network name and password.

Accessing Maps online and offline

From the Start menu, tap

On the Search bar, type in the address of your destination.

Click Directions, and then hit Go to start navigating.

To access offline maps, select to see more Settings.

Click Offline Maps.

Select Download or Update maps.

Specify which map you would like to download.

Once downloaded, you will now have access to these maps even without an Internet connection.

More questions about this device?

Go to www.alcatelonetouch.us